Instructions

Margas LC4
Louise Liljencrantz
2024



Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way.
If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com


&Tradition®


Margas LC4
Louise Liljencrantz
2024

Step 1 / 6

Ensure you have at least one other person to assist you in this process.

To remove the cover of the Margas Sofa, begin by carefully turning the sofa onto its back.

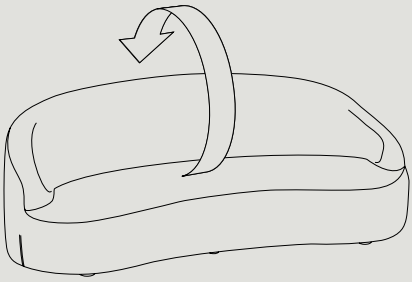

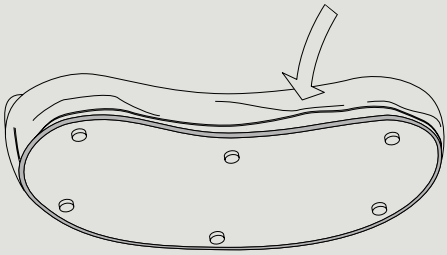


Step 2 / 6

Loosen the cover along the bottom edge of the sofa by detaching the velcro between the fabric and the sofa base.

Step 3 / 6


Locate the zipper on the left side of the sofa and carefully unzip it.

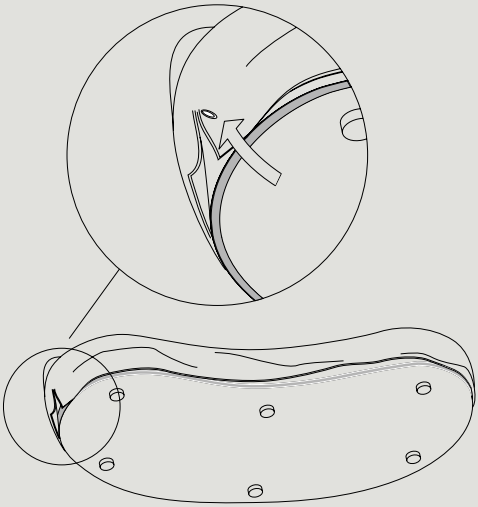


Step 4 / 6

Ensure that the velcro is fully detached before continuing with the next step.


Return the sofa to an upright position and remove the seat cover by lifting it upwards.

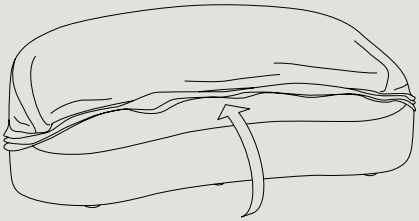

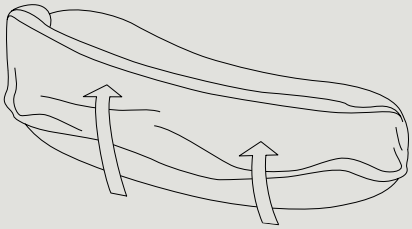

Step 5 / 6


Repeat this step for the back of the sofa by lifting the fabric upwards.

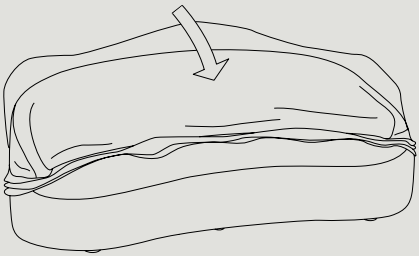

Step 6 / 6

Locate the zipper in the gap between the seat and the backrest, which holds the cover in place. Unzip it to fully detach the cover from the sofa.

To attach a new cover, repeat the steps in reverse

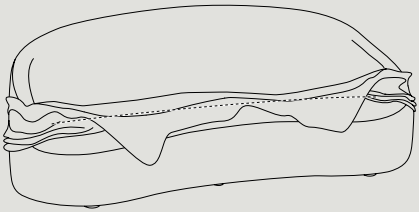

andtradition.com

